
Models SSR-XW and SSR-XWM

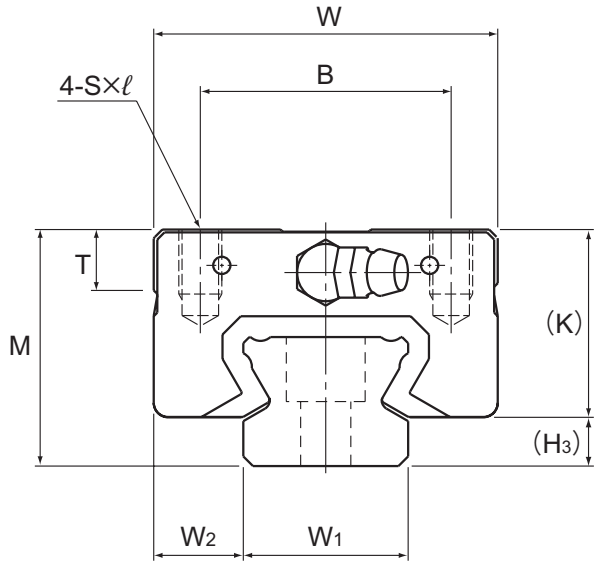

Model No.	Outer dimensions			LM block dimensions									Pilot hole for side nipple			
	Height M	Width W	Length[1] L	B	C	S×ℓ	L_1	T	K	N	E	Grease nipple	e_0	f_0	D_0[2]	H_3
SSR 15XW SSR 15XWM	24	34	56.9	26	26	M4×7	39.9	6.5	19.5	4.5	5.5	PB1021B	4.5	2.7	3	4.5
SSR 20XW SSR 20XWM	28	42	66.5	32	32	M5×8	46.6	8.2	22	5.5	12	B-M6F	5.2	2.9	3	6
SSR 25XW SSR 25XWM	33	48	83	35	35	M6×9	59.8	8.4	26.2	6	12	B-M6F	6.8	3.3	3	6.8
SSR 30XW SSR 30XWM	42	60	97	40	40	M8×12	70.7	11.3	32.5	8	12	B-M6F	7.6	4.5	4	9.5
SSR 35XW	48	70	110.9	50	50	M8×12	80.5	13	36.5	8.5	12	B-M6F	8.8	4.7	4	11.5

Model number coding

SSR25X W 2 QZ UU C1 M +1240L Y P T M -II

- SSR25X: Model number
- W: Type of LM block
- 2: No. of LM blocks used on the same rail
- QZ: With QZ lubricator
- UU: Contamination protection accessory symbol
- C1: Radial clearance symbol — Normal (No symbol), Light preload (C1)
- M: Stainless steel LM block
- +1240L: LM rail length (in mm)
- Y: Applied to only 15 and 25
- P: Accuracy symbol — Normal grade (No Symbol), High Accuracy grade (H)/Precision grade (P), Super Precision grade (SP)/Ultra Precision grade (UP)
- T: Symbol for LM rail jointed use
- M: Stainless steel LM rail
- -II: Symbol for No. of rails used on the same plane

Notes: This model number indicates that a single-rail unit constitutes one set (i.e., required number of sets when 2 rails are used in parallel is 2 at a minimum).
Grease nipples are not installed when there is a QZ Lubricator. Contact THK if you want to use a grease nipple for a model with a QZ.
See **A1-584** for contamination protection accessories. See **A1-75** for radial clearance symbol. See **A1-81** for accuracy symbol. See **A1-13** for symbol for number of rails used on the same plane.

Download data from the THK Online Services website. https://www.thk.com/